

**Period: 2010-08-11 - 2010-08-12**

Date	Process	PP Code	Product Type	Brand	Fit Model	Replace Code	Others	
2010/8/11	Add	TB2230B	Battery	AEG	BBM 18 STX, BDSE18 T Super Torque, BSB 18STX, PN18X, SB2E 18 T Super Torque		Category: Power Tools	

2010/8/11	Add	TB1014B	Battery	AEG	BBM 14 STX, BBS 14 KX RAPTOR, BBS 14 X, BBS 14 X RAPTOR, BDSE 14 STX, BDSE 14 T Super, BDSE 14.4 T Super Torque, BS 14 X, BS2E 14.4 T, BSB 14 STX, SB2E 14 STX, SB2E 14.4 T Super Torque		Category: Power Tools	
2010/8/11	Delete	CL2489B	Battery	HP	ProBook 4520s, ProBook 4720s		Category: Laptop	
2010/8/11	Delete	TB1820G	Battery	HITACHI		EB 1820	Category: Power Tools	

2010/8/12	Amend	CL1012B	Battery	ASUS	Eee PC 1201, Eee PC 1201HA, Eee PC 1201N, Eee PC 1201T, UL20, UL20A, UL20G, UL20VT	90-NX62B2000Y, 9COAAS031219, A32-UL20	Category: UMPC, NetBook & MID	
2010/8/12	Delete	CL7226B	Battery				Remark: In using this replacement battery, a warning message of "NOT ORIGINAL / GENUINE BATTERY" will appear whenever switching on your computer. Computer functioning and battery charging would not be affected. What you need to do is to shut down the notice by clicking the "Power Manager". Thanks for your attention. ->	
2010/8/12	Delete	CL7227B	Battery				Remark: In using this replacement battery, a warning message of "NOT ORIGINAL / GENUINE BATTERY" will appear whenever switching on your computer. Computer functioning and battery charging would not be affected. What you need to do is to shut down the notice by clicking the "Power Manager". Thanks for your attention. ->	

2010/8/12	Delete	CL7169B	Battery			Remark: In using this replacement battery, a warning message of "NOT ORIGINAL / GENUINE BATTERY" will appear whenever switching on your computer. Computer functioning and battery charging would not be affected. What you need to do is to shut down the notice by clicking the "Power Manager". Thanks for your attention. ->
2010/8/12	Amend	CL7170B	Battery			Remark: In using this replacement battery, a warning message of "NOT ORIGINAL / GENUINE BATTERY" will appear whenever switching on your computer. Computer functioning and battery charging would not be affected. What you need to do is to shut down the notice by clicking the "Power Manager". Thanks for your attention. ->

2010/8/12	Add	C27	Connector Tips	DELL	<p>Inspiron 1320, Inspiron 1320n, Inspiron 14 (1464), Inspiron 1420, Inspiron 15 (1545), Inspiron 1501, Inspiron 17 (1764), Inspiron 500m, Inspiron 630m, Inspiron 640m, Inspiron 700m, Latitude D400, Latitude D420, Latitude D520, Latitude D530, Latitude D600, Latitude D630, Latitude D630c, Latitude D830, Latitude E4200, Latitude E4300, Latitude E6410, Latitude X1, Latitude XT Tablet PC, Latitude XT2 XFR, Latitude Z, Precision M70, Studio 14, Studio 1435, Studio 1440, Studio 14Z, Studio 15, Studio 1535, Studio 1537, Studio 1555, Studio 17, Studio 1735, Studio 1737, Studio 1745, Studio 1747, Studio Hybrid, Studio XPS 13, Studio XPS 1340, Studio XPS 16 (1645), Studio XPS 16 (1647), Vostro 1000, Vostro 1400, Vostro 1500, Vostro 3300, Vostro 3400, Vostro V13, XPS M1210, XPS M1330, XPS M140</p>	Category: Laptop	
-----------	-----	-----	----------------	------	--	------------------	--



2010/8/12	Add	CL4566B	Battery	TOSHIB A		PA3818U-1BRS	Category: Laptop	
							Related Products: AC120.009, AC150.010, DC120.003, AC120X.009, AC150X.010	

2010/8/12	Add	C27	Connector Tips	DELL	Inspiron 11z, Inspiron 14 (1440), Inspiron 14z, Inspiron 15 (1564), Inspiron 15z, Latitude E4310, Latitude E5400, Latitude E5410, Latitude E5510, Latitude E6400, Latitude E6400 ATG, Latitude E6500, Studio 1557, Studio 1558, Vostro 1220, Vostro 1320, Vostro 1520, Vostro 1720		Category: Laptop	
							Related Products: AC090.008C27, DC091.006C27, EL1901, EL1691, EL1692, EL1695, EL1696	

2010/8/12	Add	C27	Connector Tips	DELL	Inspiron 1150, Inspiron 1420, Inspiron 1501, Inspiron 1520, Inspiron 1521, Inspiron 1525, Inspiron 1720, Inspiron 1721, Inspiron 300m, Inspiron 500m, Inspiron 505m, Inspiron 510m, Inspiron 6000, Inspiron 600m, Inspiron 610m, Inspiron 630m, Inspiron 6400, Inspiron 640m, Inspiron 700m, Inspiron 710m, Inspiron 8500, Inspiron 8600, Inspiron 9200, Inspiron 9300, Inspiron 9400, Inspiron E1405, Inspiron E1505, Inspiron E1705, Latitude 100L, Latitude 2100, Latitude D400, Latitude D410, Latitude D420, Latitude D430, Latitude D500, Latitude D505, Latitude D510, Latitude D520, Latitude D530, Latitude D531, Latitude D540, Latitude D600, Latitude D610, Latitude D620, Latitude D620 ATG, Latitude D630, Latitude D630 ATG, Latitude D630c, Latitude D631, Latitude D800, Latitude D810, Latitude D820,		
-----------	-----	-----	----------------	------	---	--	--

2010/8/12	Add	C27	Connector Tips	DELL	Latitude D830, Latitude E4300, Latitude E5400, Latitude E5500, Latitude E6400, Latitude E6400 ATG, Latitude E6500, Latitude X1, Latitude X300, Latitude XT Tablet PC, Precision M1210, Precision M140, Precision M20, Precision M2300, Precision M2400, Precision M4300, Precision M4400, Precision M60, Precision M65, Precision M70, Studio 14, Studio 1435, Studio 15, Studio 1535, Studio 17,		
2010/8/12	Add	C27	Connector Tips	DELL	Studio 1735, Studio XPS 13, Studio XPS 1340, Studio XPS 16, Studio XPS 1640, Vostro 1000, Vostro 1310, Vostro 1400, Vostro 1500, Vostro 1510, Vostro 1520, Vostro 1700, Vostro 1710, Vostro 1720, Vostro A840, Vostro A860, XPS M1210, XPS M1330, XPS M140, XPS M1530	Category: Laptop	